


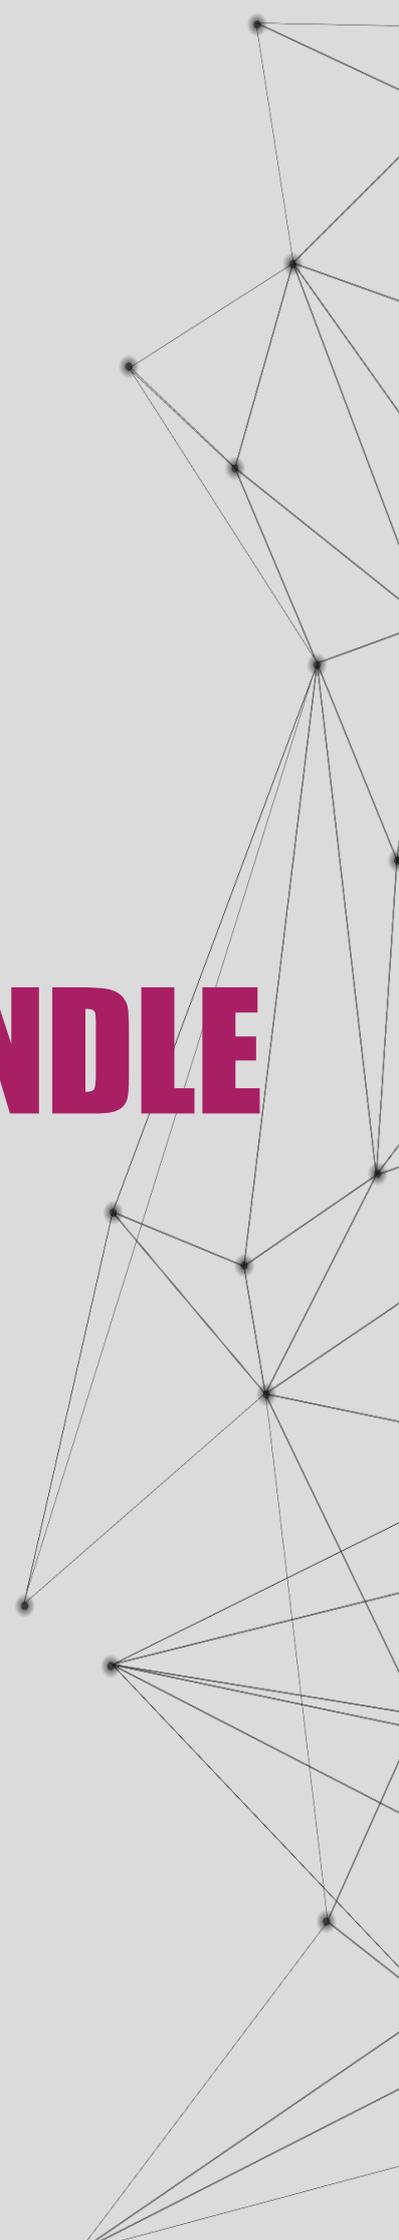

HALKE
SMART DOOR HANDLE
HA42
MANUAL






HALKE SMART DOOR HANDLE HA42

FEATRUES

- **Material:** Stainless Steel
- Handle size: **280 mm x 38 mm x 28 mm**
- Door Thickness: **30- 68 mm**
- Working voltage **6V (4*AAA batteries)**
- The smart door handle has 6 different ways to unlock- fingerprint reader, PIN-code, WiFi opening, mobile APP, smart card and mechanical key.
- Battery life: 10 000 times locking and unlocking operation
- **Color:** black, silver
- Working Temperature -20°C~70°C
- Handle weight 2.5 kg
- Halke smart door handle has a user-friendly and constantly evolving mobile app that lets You control the handle via smartphone.
- The smart door handle can be unlocked in case of a emergency with an auxiliary power supply or mechanically with a key.
- The handle is suitable for Airbnb, home, office, store, hotel etc. doors.

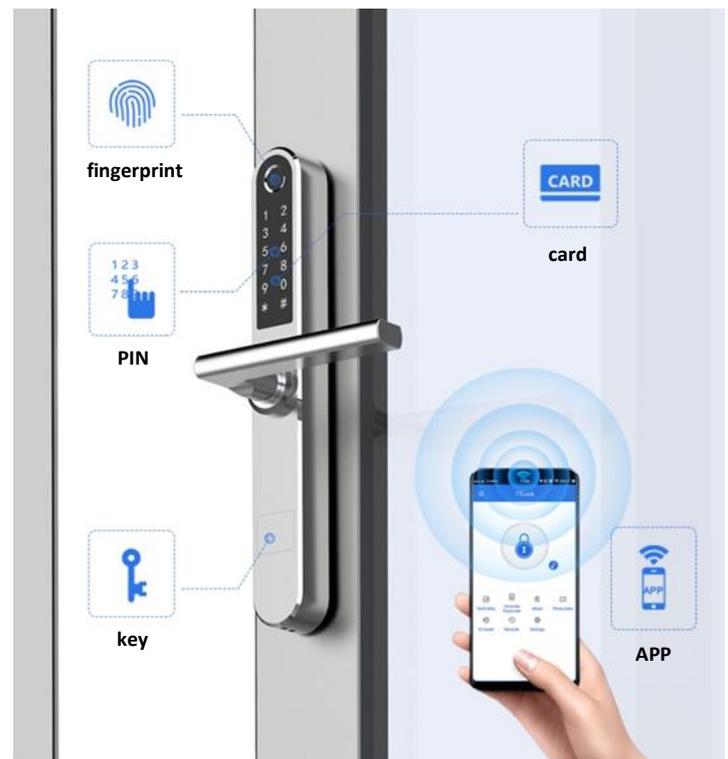



LOCK FORCE OÜ

Laki 30, Tallinn 12915





Ph: +372 660 9997, e-mail: info@lockforce.ee

www.lockforce.ee

DRAWINGS



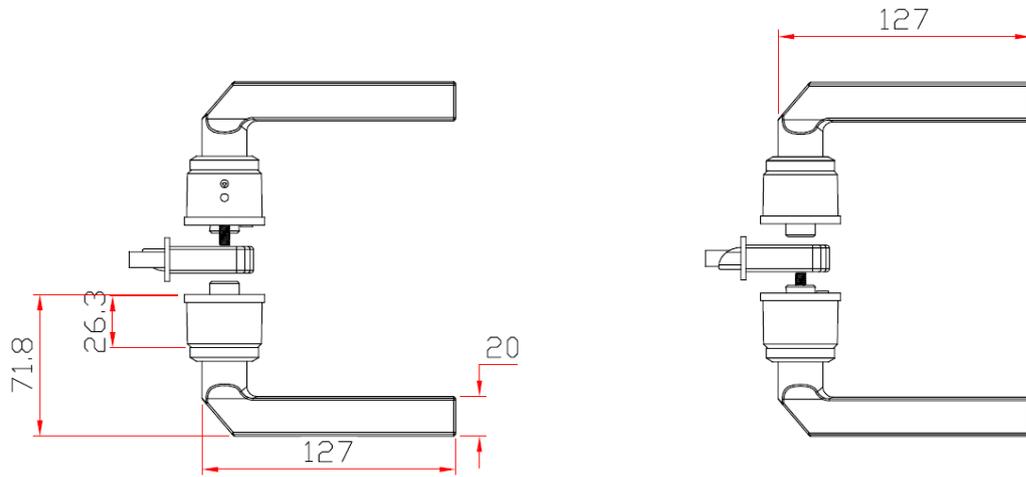
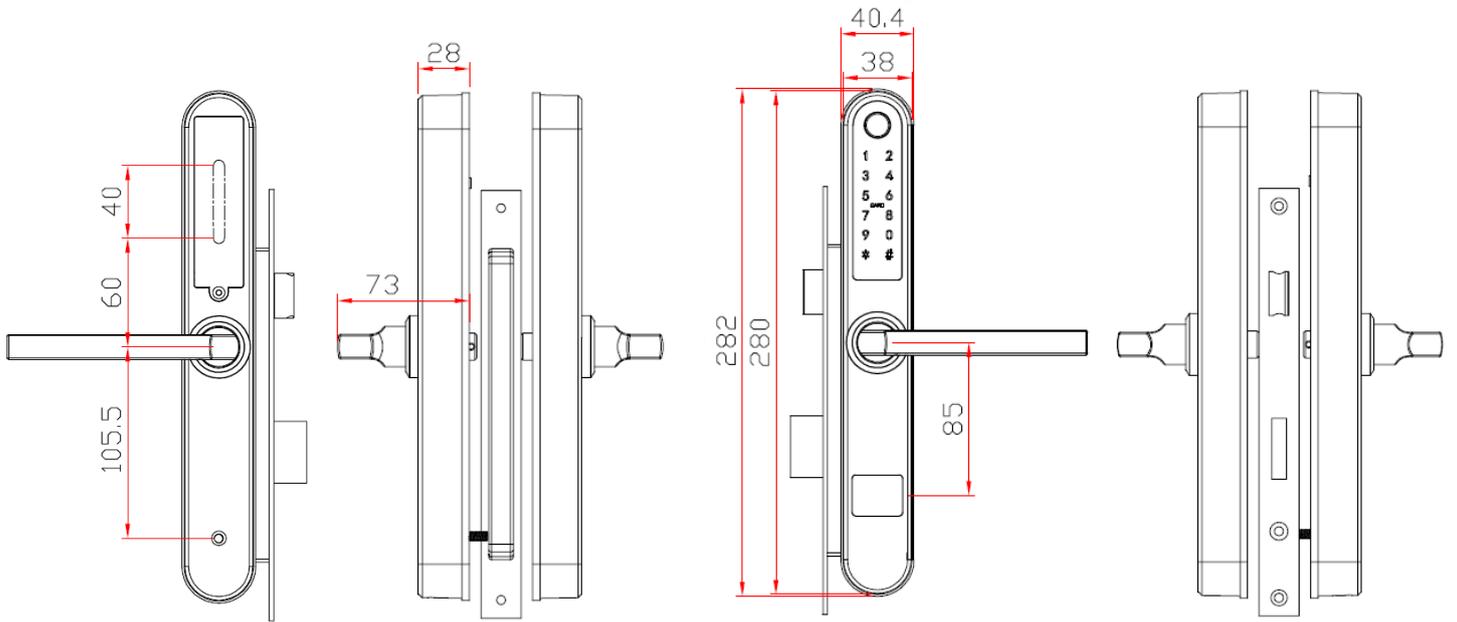


LOCK CASES FOR ALUMINIUM DOORS

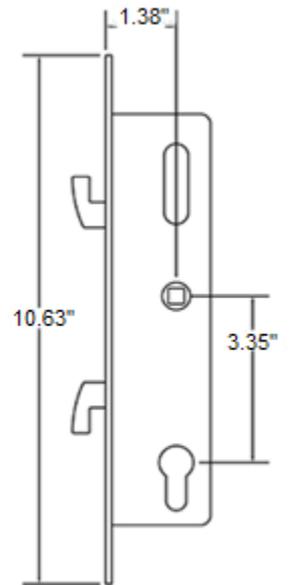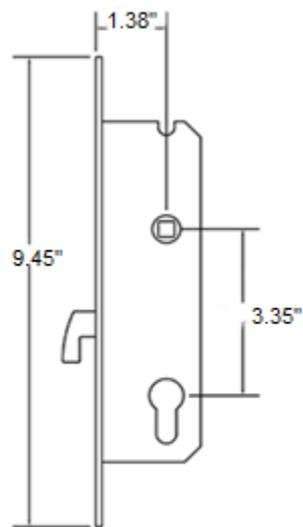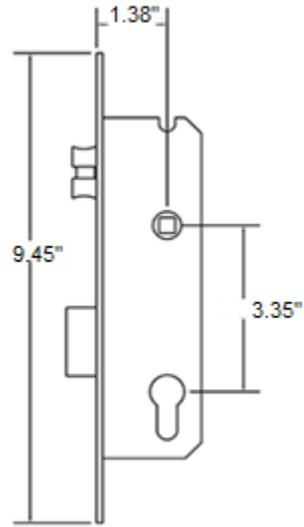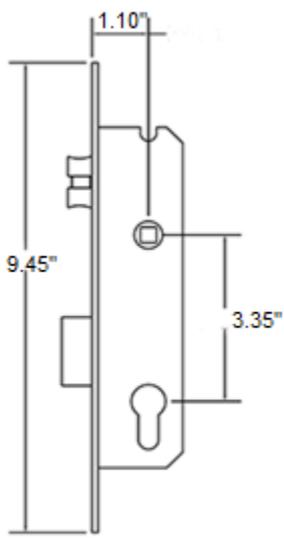

ABLOY LE314

LOCK CASES FOR WOODEN AND SECURITY DOORS

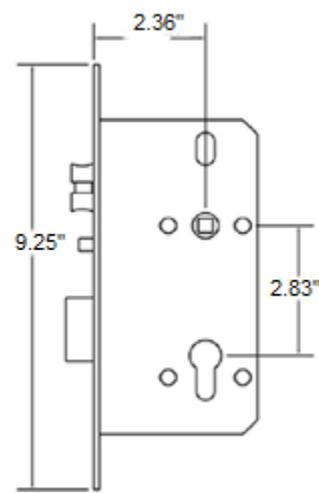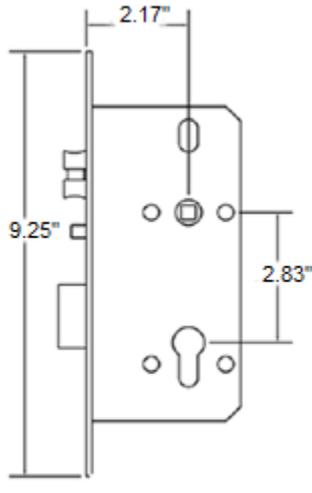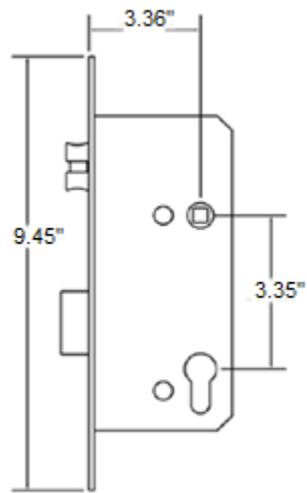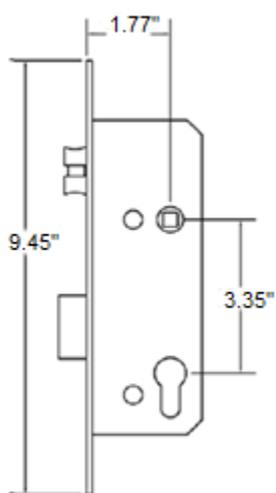


ABLOY LE184


ASSA 510

INSTALLATION


I. Install Mortise

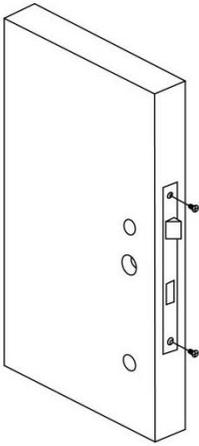


II. Install Square Shaft and Hexagon Screw Casing

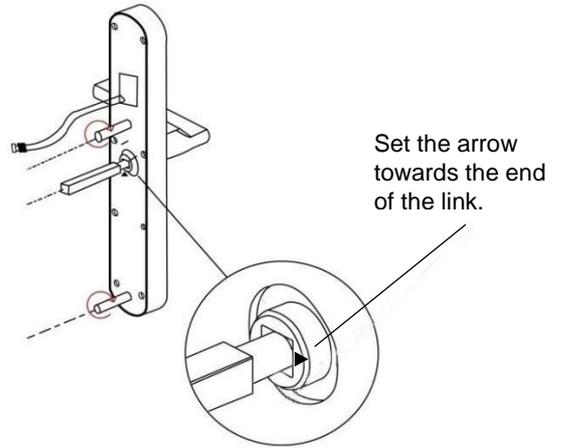


III. Install Front Panel

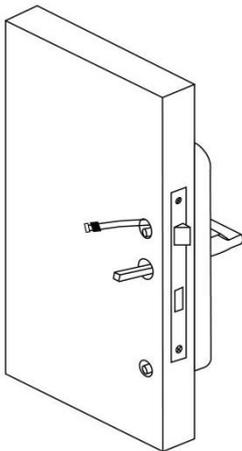


IV. Install Back Panel

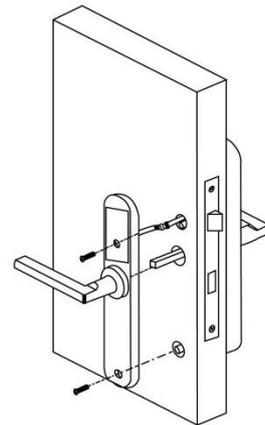


V. Install the Battery

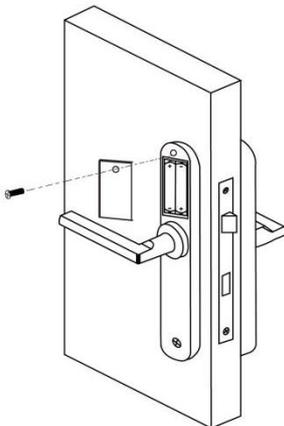

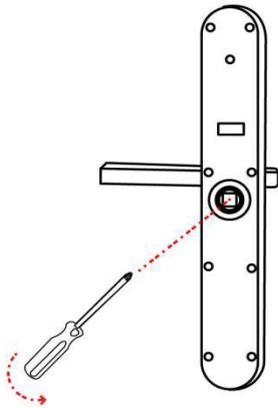


Turn the handle on the front panel.


Loosen the inner hexagon screw of the handle counterclockwise.

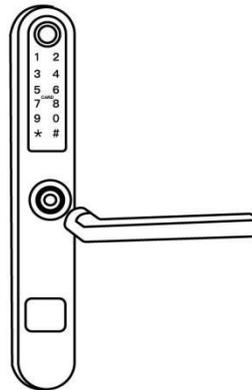

Remove the handle.

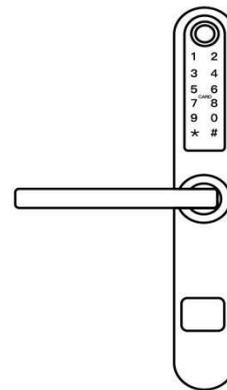


After adjusting the direction of the handle, insert it into the handle seat and re-lock the hexagon screw of the handle to complete the turning.

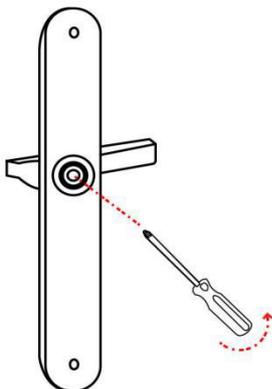


Turn the handle on back panel.

Loosen the inner hexagon screw of the handle counterclockwise.

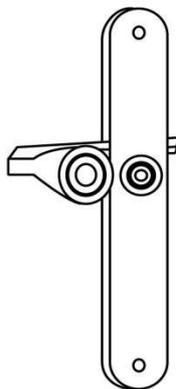

Remove the handle.

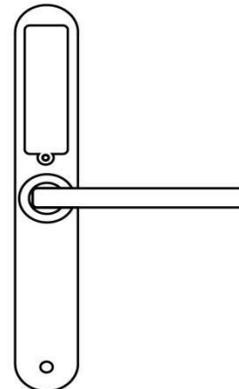

After adjusting the direction of the handle, insert it into the handle seat and re-lock the hexagon screw of the handle to complete the turning.

SYSTEM INITIALIZATION

- I. Install the battery.
- II. Press the „Reset“ button on the back of the panel for 5 seconds.
- III. Press the number combination „000#“ and the initialization is complete





Reset button



REGISTRATION





1. Open the camera of your smart phone. Scan the QR code according to your phone's operating system and download the free TTLock mobile app.
2. Register a new account using your phone number or email address.
If the registration is successful, You will be redirected to the security question settings page.
3. Log in using your number or email account.

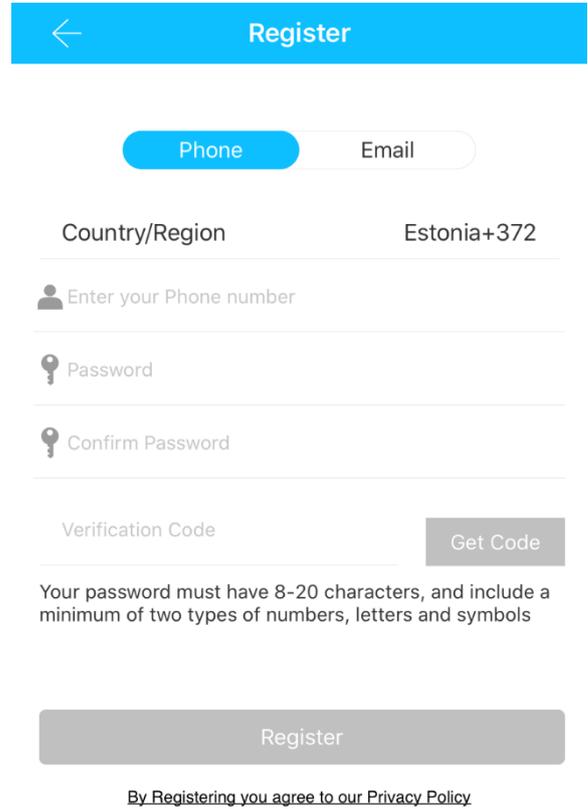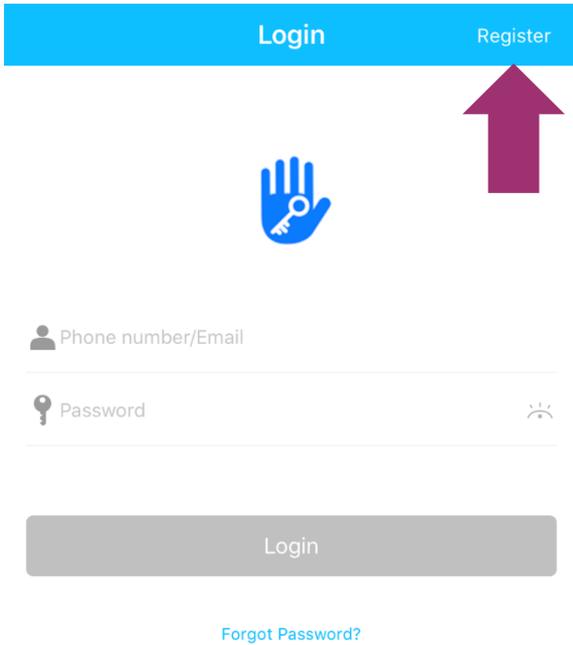

4. Touch the door handle screen and press "Press to Add Lock". Select "Door Lock". The nearby door handle is displayed on the screen, press "+".

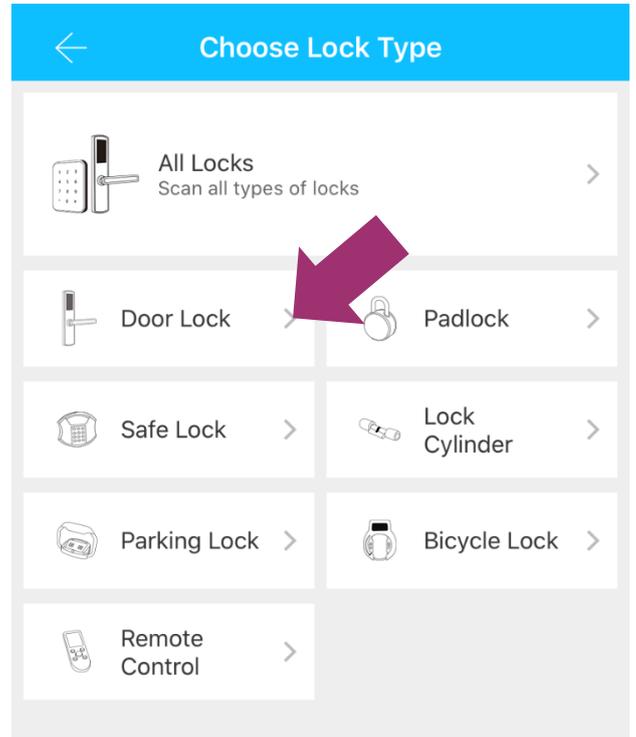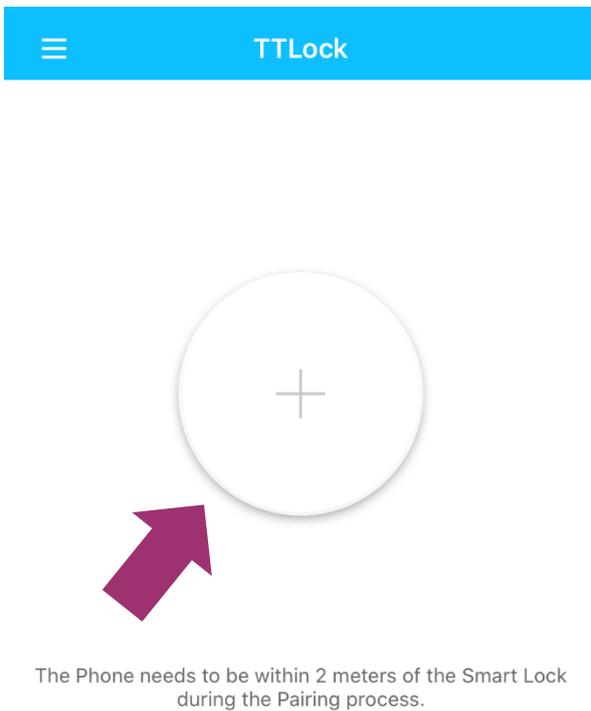

5. Rename the door handle and press "OK". The door handle is set.

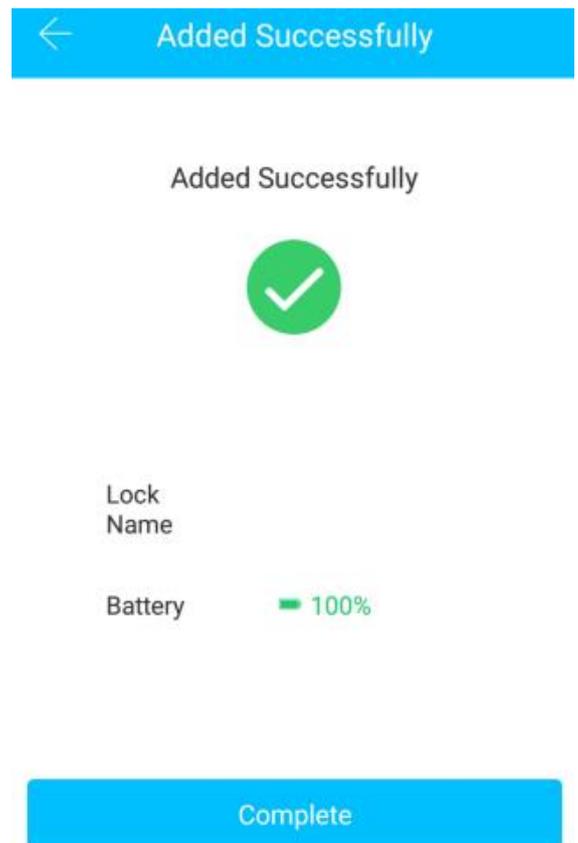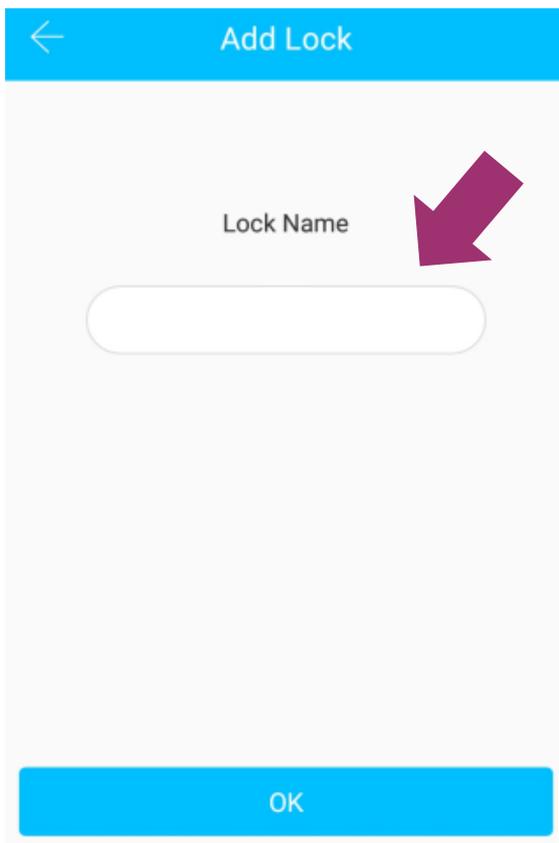

UNLOCKING


The Halke smart door handle has 6 different ways to unlock- fingerprint reader, PIN-code, WiFi opening, mobile APP, smart card and mechanical key. Unlocking operations can be done in the mobile APP TTLock and also on the website www.ttlock.com.

PS! The key is only for emergency unlocking, not for continuous use! Store the key separately from the locked building.

On the website www.ttlock.com, select from the menu „Software“ and from the drop-down menu „Lock Management“. Sign in with Your user account and perform all smart door handle actions on the web.


BLUETOOTH UNLOCK

Turn on Bluetooth in Your smart phone and open the TTLock mobile APP. Connect mobile and smart door handle and press the  button: to open the lock. The distance between the mobile phone and the smart door handle can not be longer than 5 meters. To lock, press on the same button for 3 seconds.

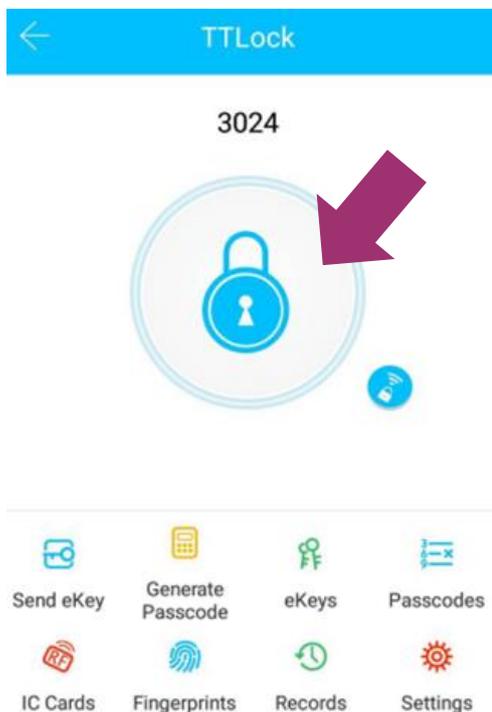


REMOTE CONTROL UNLOCK

After confirming that Your phone and door handle are connected to the Gateway HUB G2V, click on the button:  You can unlock it anywhere if Your phone has a internet connection. The tutorial for connecting the Gateway with Your smartphone is in the next chapter.

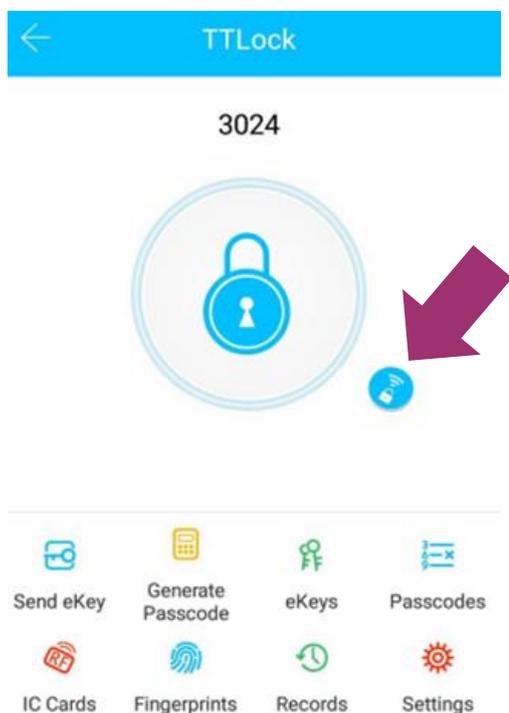

BLUETOOTH KEY REMOTE AUTHORIZATION

Press the button  to send the remote authorization. The E-Key can be sent to the contacts on Your mobile phone and to the users of the TTLock APP using a username.

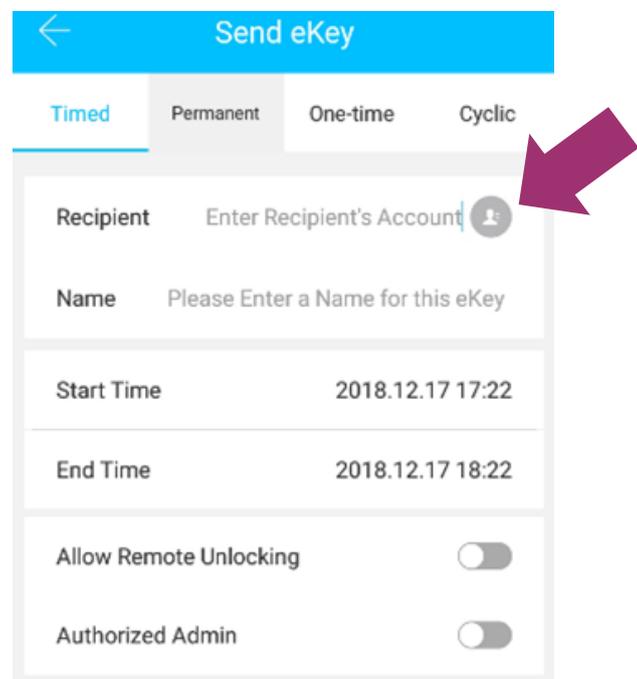

Give the E-Key a name and a duration. The duration can be limited (Timed), Permanent, One-time or Cyclic.

The screenshot shows the 'Send eKey' interface. At the top, there is a blue header with a back arrow and the text 'Send eKey'. Below the header are four tabs: 'Timed', 'Permanent', 'One-time', and 'Cyclic'. The 'Timed' tab is selected and circled in red. The main form area contains the following fields and controls:

- Recipient:** A text input field with the placeholder 'Enter Recipient's Account' and a person icon.
- Name:** A text input field with the placeholder 'Please Enter a Name for this eKey'.
- Start Time:** A text field displaying '2018.12.17 17:22'.
- End Time:** A text field displaying '2018.12.17 18:22'.
- Allow Remote Unlocking:** A toggle switch that is currently turned off.
- Authorized Admin:** A toggle switch that is currently turned off.
- Send:** A large grey button at the bottom of the form.

A purple arrow points to the 'Allow Remote Unlocking' toggle switch.

Specify whether the user of the E-Key can also unlock the door over the Internet and if the user is an administrator of the handle. The e-key can be paused and deleted by the administrator user at any time.

PASSWORD OPENING

You can create and manage your passwords at any time through your mobile or web. The password can be permanent, timed, one-time or recurring. The password can also be created with a custom number combination. You can create up to 150 different password combinations.

The permanent password works at any time without a time limit until it is deleted. It can be used, for example, for office workers or at home with family members. The password must be used in 24 hours after creating it, otherwise it will be deleted.

The time-valid password is suitable for hotels, Airbnb and hostels. The guest will have their own password which expires when the stay is over.

A time-limited password can have an expiration date of at least one hour and a maximum of three years. The time-limited password must be used within 24 hours, otherwise it will expire automatically.

How to change the time-valid password? Enter the original password to unlock, then enter "10 # original password # new password (between 4 and 6 digits) # re-enter new password #".

The one-time password is used only once and after using it, the password will be deleted and it is not possible to enter with the same password again from the door. A one-time password is valid for 6 hours.

The cyclic password can be used at certain times and repeatedly, for example to allow the cleaner, the dog walker, the babysitter, etc. to pass in time. By creating this password, you can select a specific day of the week and time for that day.


In the mobile APP, it is possible to **create a password with 4-6 numbers (Custom) with a number combination of your choice**. It is also possible to set a time validity for a password with a number combination. You can create up to 150 custom passwords.

The system shows the E-Key expiration warning in two colors. Yellow means that the key will expire soon, and red means that the E-Key has expired.

All created passwords can be viewed, managed, changed and deleted in the password management module.



Password Management

Press the button  . See Admin Passcode. Click "Generate Passcode" and create an administrator password for the smart door handle.

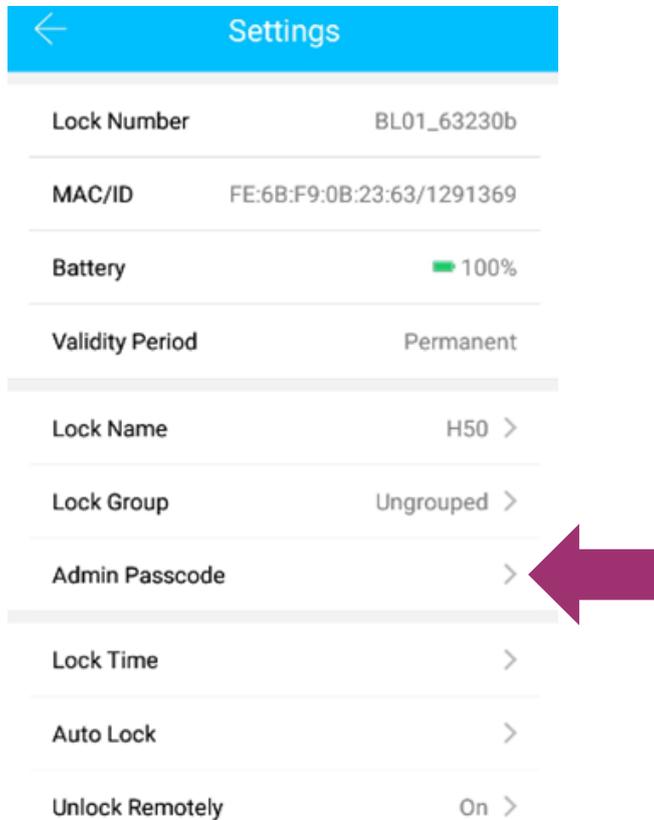

Press the button  . Select the appropriate password type (Permanent, Timed, One-Time, Custom), specify a name and expiration date for the password.

Click the "Generate" button and the mobile app will generate a 6-digit password. When creating a "Custom" password, a 4-digit number combination must be entered.

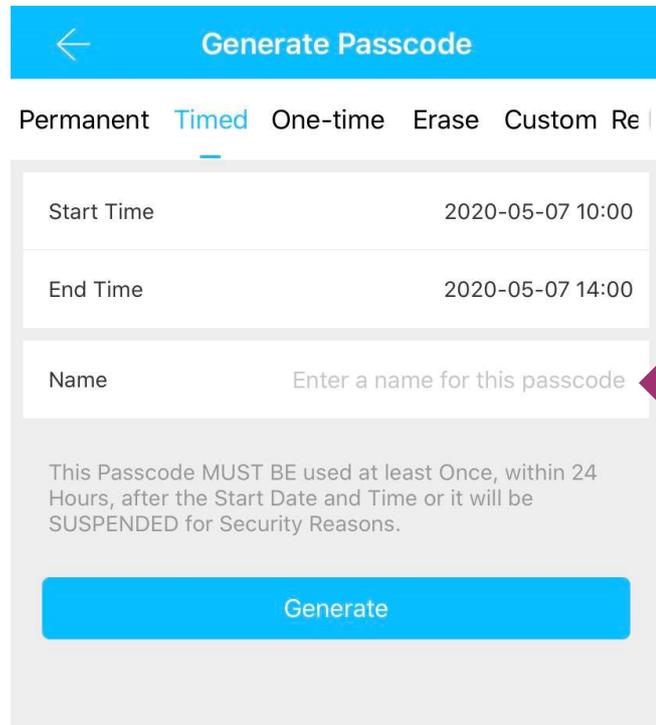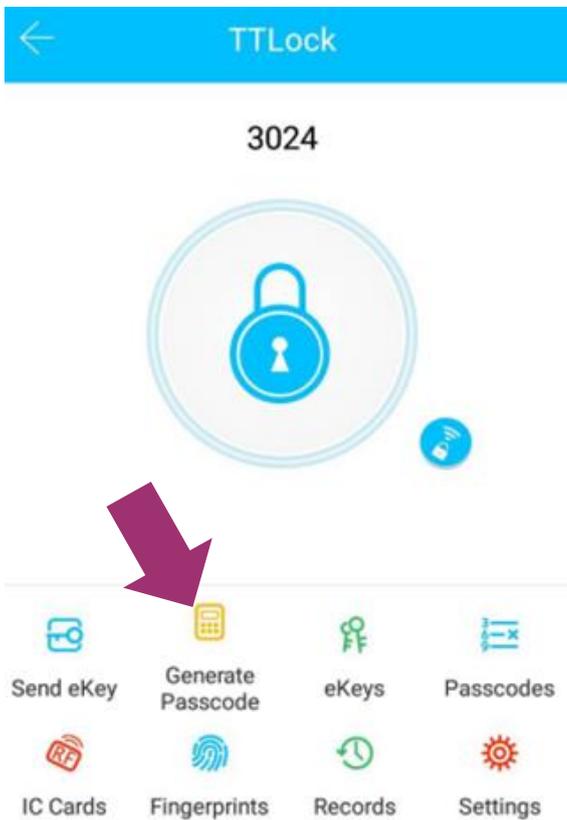

The password is ready for use. Enter the password and the "#" sign in the panel. Smart door handle alerts and unlocks when you enter the correct password.

Smart door handle allows you to create up to 150 different passwords. Expired passwords can be reactivated.


The passwords can be shared with users via SMS, e-mail, Facebook Messenger and the WhatsApp mobile app.

Press the button  , to see the unlock history.

FINGERPRINT UNLOCKING

The fingerprint must be registered in the mobile APP before it can be used. It is possible to create a permanent or time-limited fingerprint unlock for the smart door handle.

Press the button  and  and then „Add Fingerprint“.

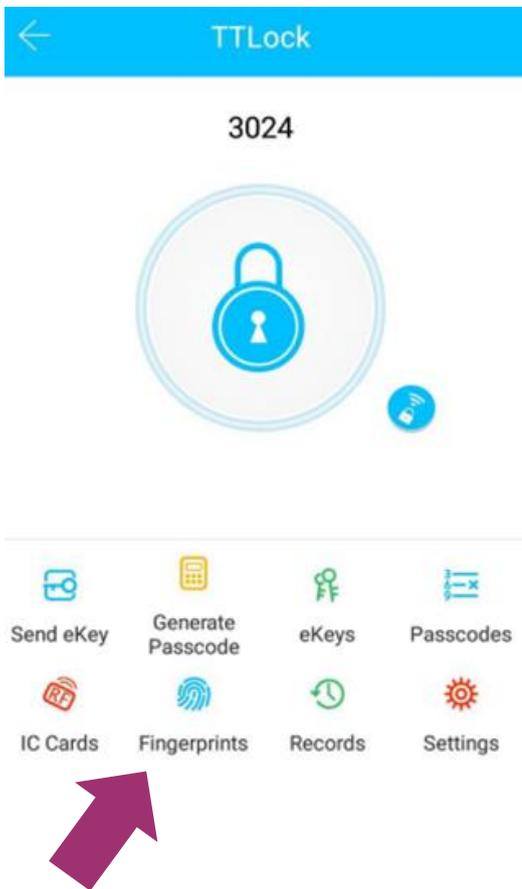

Give the fingerprint a name and a duration. Press "Start" and place your finger on the sensor. Follow the instructions in the mobile app. For one handle can be set up to 100 different fingerprints.

CARD OPENING

The card must be set up before using it. The smart card can be permanent and it is also possible to set a time limit on the card. The smart door handle allows to add up to 200 different cards.

Press the button  , then  and insert the smart card according to the instructions displayed in the mobile APP. The whole process must be done through the APP next to the door handle. The validity period of the IC card can be set to either permanent or time-limited.

All IC cards can be managed via the IC card management module. For Gateway, the remote card issuance function is displayed. If there is no Gateway, this function is hidden.

GATEWAY

Set up the connection between the gateway and the phone

- A. Connect Your phone to the Wi-Fi network to which the gateway is connected.
- B. Click the plus button in the upper right corner and enter the WiFi password and Gateway name. Click OK and enter the password for authentication.
- C. Press and hold the gateway setup button for 5 seconds. A green light indicates that the gateway has entered insertion mode.



When the Gateway is powered on:

-  Light flashes alternately in red and blue: stand-by mode, ready to pair
-  Blue light: working mode
-  Red light: network failure

Pair the Gateway with APP

1 Activate the APP



2 Press "☰"



3 Select „Gateway“



7 Add Gateway




8 Select the network and fill in the password




9 Add complete

4 Select „G2“

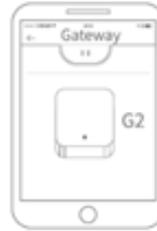

5 Plug in the Gateway and power it on while the light flashes in red and blue

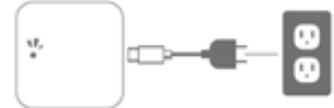


6 Press „+“ sign



If the connection fails, unplug the Gateway and repeat the process.

PACKAGE

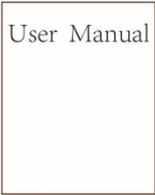				
Name	Front Panel	Rear Panel	Manual	Mortise
Quantity	1	1	1	1
				
Name	Striker	Pointed screw	Mechanical Key	Card
Quantity	1	4	2	3
				
Name	Square screw	Spring	Fixing screws	Hexagon screw
Quantity	1	1	2	2
				
Name	HUB G2V			
	Not included			

QUESTIONS

SMART DOOR HANDLE

How can I set the time on the smart door handle?

The application automatically adjusts the internal clock of the smart door handle when used with a 3G / 4G / WiFi connected phone.

Is it possible to mute voice instructions on a smart door handle?

Yes, you need to select "Settings" → "Lock Sound" → "Turn off". You can reactivate voice guidance at any time.

NUMBER PANEL

Why does the light on the keyboard goes out as soon as I activate the smart door handle?

This feature is for security purposes. If you enter the wrong PIN five times in a row, the handle is inactive for 5 minutes. To activate the handle immediately, you need to unlock it from the mobile app.

Why does the light on the number panel flash?

When you enter the password on the number panel, the light flashes to indicate that the battery is low. Replace the smart door handle batteries immediately.

Why doesn't the number panel work?

The batteries may be empty, replace the batteries.

PASSWORD

How long is the PIN valid?

The permanent password is set indefinitely and does not expire. A scheduled password can be set for a maximum of three years.

What happens if the user and smart door handle are in different time zones?

The time is set according to the time zone of the smart phone user's phone.

Why can't I set a password start and end time?

Some previous generation smart door handles do not have the ability to set the time. These smart door handles can only set a password period.

Why is my password not working?

- The password has been deleted.
- The password was never used within 24 hours of activation.
- The password time is expired.
- The smart door handle time is incorrect.

MOBILE APP TTLOCK

Why can't I control my smart door handle through the mobile APP?

There are several ways to do this:

- Your e-Key has been deleted, suspended or expired.
- The mobile phone does not work or Bluetooth is turned off. To resolve this, close the application, turn on Bluetooth on your phone, and reopen the mobile application.

OTHER

How can I deactivate an eKey, fingerprint, PIN code or smart card?

All factors mentioned in the question can be deleted in the TTLock APP

What is a Gateway?

The HUB G2V control center is connected to your WiFi network and works with your smartphone over the Internet.

Can I manage the smart door handle on the web?

Yes. You need to go to www.ttlock.com, select „Software“ from the menu and „Lock Management“ from the drop-down menu. Log in with your TTLock account and pressing the lock opens a view of the different actions that can be performed with the handle.



LOCK FORCE OÜ

Laki 30, Tallinn 12915

Ph: +372 660 9997, e-mail: info@lockforce.ee

www.lockforce.ee